

4K HDMI® intelligent matrix switch

USER'S MANUAL

4K HDMI® intelligent matrix switch packing list

The complete HDMI® intelligent matrix switch is composed of the following components:

1. One matrix switcher
2. One power cable
3. One power adapter
4. One RS 232 serial cable
5. One infrared remote control

Safe Operation Guide

Before powering on the device, you need to check to ensure that the chassis is well grounded to prevent electrostatic discharge from the chassis and endangering the device and the device.

Personal safety and good shielding effect. Please comply with the following matters during installation, use and maintenance:



Please note that the chassis is well grounded

1. When you need to move the equipment or other work that need to be powered off, you need to turn off all the power supply, including the power switch, unplug the power plug, etc. to ensure the safety of your and equipment.

Note: When rainy and humid weather or not in use for a long time, the power gate should be closed.

2. Do not put items on cables such as power lines, signal lines, and communication cables. We should avoid cables to step on or squeeze to prevent risk such as leakage or short circuit.

3. When inserting and unplugging the signal line from the device, the equipment needs to be powered off to avoid damaging the device. The damage caused by charged plugs is not within the warranty range.

4. The equipment should be installed or resettled reasonably, and the equipment power supply will be fever when working. Therefore, it is necessary to maintain a good ventilation of the working environment to avoid damaging the equipment when the temperature is too high. If you install a standard rack, chassis, cabinet, or on the work table on a solid platform, you need to prevent the equipment from falling.

5. Pay attention to dust proof and moisture -proof, and do not place the system equipment in excessive cold or overheating places.

6. Pay attention to avoid liquid soaking and splashing into the device, especially to prevent chemicals or liquid sprinkle on the device or nearby.

7. All maintenance should be completed by professional maintenance personnel. Do not try to repair the equipment yourself without training to prevent the risk of electric shock, so as not to occur or aggravate the degree of equipment damage.

Directory

1. Product overview	03
2. Product features	03
3. Technical parameters	05
4. Interface display	06
4.1 8x8 Interface display	06
4.2 16x16 Interface display	07
4.3 Interface description	08
5. Product connection diagram	10
6. Device operation and instructions	11
6.1 Matrix panel description	11
6.1.1 Numeric keys	11
6.1.2 Function keys	11
6.2 Serial port, LAN port, WEB control operation	20
6.2.1 Software settings	20
6.2.2 Control display operation	23
6.2.3 Channel name	26
6.2.4 Scene Operations	27
6.2.5 Advanced settings	29
6.2.6 Splicing settings	36
6.2.7 Customer customization	38
7. APP operation description	39
7.1 Install APP control software	39
7.2 APP software operation	39
7.3 APP software setting	40
8. Remote control description	44
8.1 Remote control description	44
8.2 Remote control infrared code	44
9. Matrix control protocol	46
10. Common product failures and precautions	48

1. Product overview

This device is the latest ultra -high -definition seamless curing stitching matrix. The design method of Multi-input multi-output to increase the audio analysis, transmission, distribution, splicing, switching and use keys. The design concept of software, equipped with signal resolution adjustment, supports seamless and fast switching functions, strong cost performance, which reflects its value. This matrix adopts electromagnetic protection design, which can effectively shield the electromagnetic interference from the surrounding environment, so that the device can run stably.

The 4K HDMI® intelligent matrix is a high -performance professional switching device with high -performance embedded intelligent control. It is used to synchronize or switch the audio and video input signal or asynchronous to any output channel for audio and video. Using unique processing methods, the equipment switching speed is greatly improved. The control method is flexible, with long -life button panel operations, large screen lighting matrix LCD screen shows various information, with network and RS232 communication interface control, which can be used to use various remote control devices such as personal computers and central control systems.

The 4K HDMI® intelligent matrix is mainly used in radio and television engineering, multimedia conference hall, large screen display engineering, television teaching, command control centers and other places.

2. Product Features

1. Seamless instant switching, there is no black screen, blue screen, and broken screen in the switching process, and there is no slow excessive animation.
2. Support maximum resolution: 4Kx2K@30Hz, 1080P@60Hz.
3. Collection allocation, switching, stitching function integration, powerful product function.
4. There is no CPU and operating system for the full hardware architecture, and the operation response is faster.
5. Support screen splicing function, compatible with cross -screen and vertical screen multiple stitching modes.
6. Support to embed the external analog audio into the HDMI signal stream to achieve audio embedded.
7. Support audio separation, with the AUDIO output port, which can be connected to the power amplifier to achieve the original HDMI signal output audio embedded and audio separation.
8. The analysis, distribution, and switching of three -dimensional sound audio supporting various video signals.
9. Have 6 control methods: visual panel buttons, RS-232, infrared remote control, LAN, WEB and Android APP control, diversified control methods, providing users with more and more convenient operations.

10. Visual operation buttons, the input and output channel status can be visualized through the key indicator.
11. Support Harmonyos, Linux, Windows, Apple iOS and other browser web webpage control.
12. Each signal supports HDCP decoding, blue light, 3D.
13. There is an ESD static design inside the product, which supports hot insertion, and the system is stable and reliable.
14. Support EDID to write EDID adaptive functions, better adapt to the diverse display equipment on the spot, and improve compatibility.
15. The software supports the built -in 16 scene modes, and each channel has its own name. When saving, you can name each scene for subsequent recognition of the setting of the video wall scene.
16. Support fast switching of the channel, the rapid preservation and retraction of the scene mode.
17. Support the automatic storage and protection of electricity off -powering scenarios.
18. 3D image multiplier repair, near pixel recurring processing, and 3D removal processing function for image repair function.
19. Support reduction frequency processing, near pixel repair processing and fuzzy processing to achieve image reduction processing function.
20. Long -term driver capacity: Enter the automatic equilibrium to effectively reduce the certainty jitter caused by line transmission.
21. Output adjustable gain mode, so that the receiving terminal can still receive signals after long -term transmission. Using high -quality HDMI1.4 cables, the input transmission distance can reach 20 meters, and the output transmission distance can reach 25 meters.
22. Support over pressure, overcurrent, overheating, and overload protection, reducing the probability of damage to equipment.
23. The host display uses an English high -resolution display, which supports logo and model burning customization.



"The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries. " OR "The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. "

3. Technical parameters

Name	4K HDMI® intelligent matrix switch	
Model	8 IN 8 OUT	16 IN 16 OUT
Display method	Copy mode, cross display mode, custom splicing	
Switch speed	Seamless second cutting	
Input interface	HDMI® *8	HDMI® *16
Output Interface	HDMI® *8	HDMI® *16
Audio embedded	3.5MM*8	3.5MM*16
Audio unembedded	3.5MM*8	3.5MM*16
Video format	4K*2K@30Hz	
HDMI® compatible	HDMI® 1.4 (Downward compatibility)	
Control method	Visual buttons, RS232, LAN, Infrared remote control, WEB, Android APP, third party (central control)	
Controlling software	Professional control software	
RS-232	Potter rate: 115200, data bit: 8, stop bit: 1, no strange puppet verification	
Power supply	DC 12V	DC 12V
Power consumption	≤15W	≤30W
Electrostatic protection	Human model: ± 8KV (air discharge), ± 4KV (contact discharge)	
Height	1U	2U
shell material	Metal	Aluminium Front Panel + Iron Shell

4. Interface display

4.1 8 IN 8 OUT interface display

Front panel interface display




Rear panel interface display




4.2 16 IN 16 OUT interface display

Front panel interface display

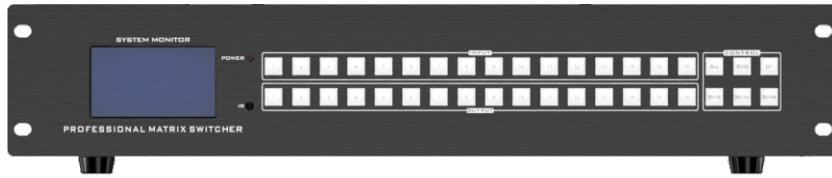


Rear panel interface display

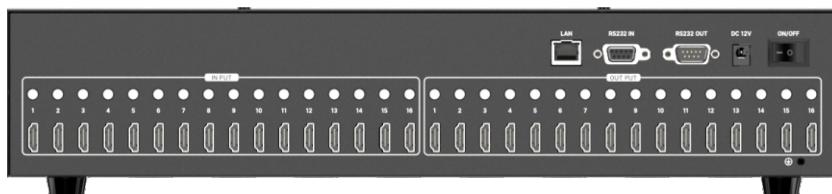

4.3 Interface description


Front panel interface description

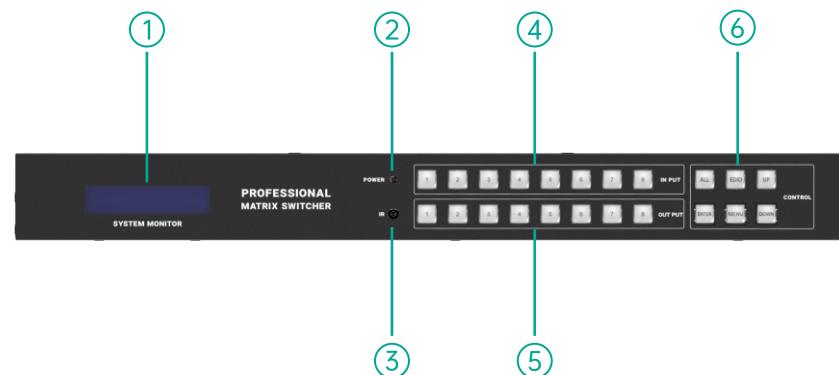

Serial number	name	illustrate
①	LCD	Show the device current operation command
②	POWER	Power indicator light
③	IR	Infrared indicator (command to receive infrared remote control)
④	IN PUT (1~8) keys	Input channel switch button
⑤	OUT PUT (1~8) keys	Output channel switch button
⑥	ALL key	Select all button
⑥	EDID key	EDID learning button
⑥	UP key	Up key
⑥	ENTER key	ENTER
⑥	MENU key	MENU
⑥	DOWN key	DOWN key


5. Product Connection Diagram

Rear panel interface description

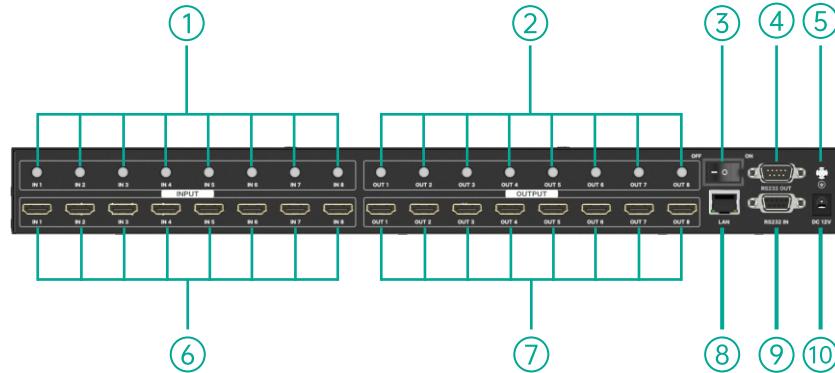

Serial number	name	illustrate
①	AUDIO (IN1~IN8)	3.5MM audio input interface
②	AUDIO (OUT1~OUT8)	3.5MM audio output interface
③	Switch	Power switch (control matrix switch)
④	RS232 OUT	RS232 control interface (connect other RS232 interface devices in series)
⑤	Ground wire	Ground wire grounding mark
⑥	HDMI® (IN1~IN8)	HDMI® signal input interface
⑦	HDMI® (OUT1~OUT8)	HDMI® signal output interface
⑧	LAN	Network control interface
⑨	RS232 IN	RS232 control interface (connected to computer control matrix)
⑩	DC 12V	Power interface (powering the matrix)

Product Connection Diagram

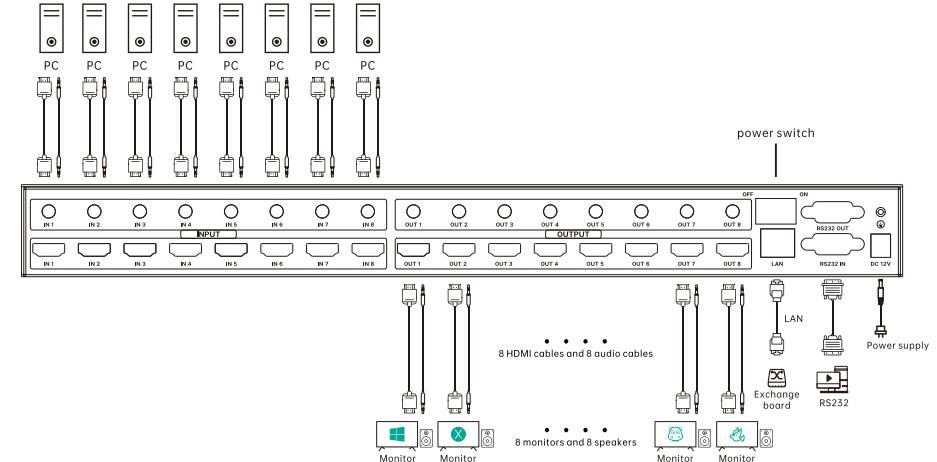

6. Equipment operation and instructions

6.1 Matrix Panel Description

6.1.1 Numeric keys

1. Input and output channel selection keys are used to set the input and output channels of audio and video signals or for current matrix status query, EDID selection, etc.

6.1.2 Function keys

1. "ALL" means selecting all input or output ports (different representations in different states) to switch selections and execute all switching commands.
2. "EDID" Press the EDID key, and the key panel will automatically prompt the input sources that can be learned. You can select a certain channel or all input sources to read. There are many internal EDID formats (4K30_DTS , 4K30_AC3, 4K30_5.1 , 4K30PStereo , HD8Suport4K, HD12DolbyDTS, HD12Stereo3D, HD8Lossless, HD8DolbyDTS, HD8Stereo, OUT1~OUT8, USER1~USER5). Do not unplug and plug HDMI cables, it will be read automatically. EDID.Example of operation

Operation example

- ①. Press the "EDID" button and the following operation interface will appear;



- ②. If you want to set the EDID data of a certain input port, select input buttons 1~8 ("x" means optional 1~8). The following left operation interface will appear. Press UP/DOWN to select the internal EDID and press ENTER to confirm. The interface on the right appears, where 1~8 refers to setting the EDID of an interface individually;



- ③. If you want to set the EDID data of all input ports, select the ALL button, and the left interface will appear. Press UP/DOWN to select up and down. After selecting the internal EDID, press ENTER to confirm, and the right operation interface will appear;



3. Press the "ENTER" key to confirm the operation command.
4. "MENU" menu key. If the operation is incorrect, press the menu key on the matrix panel and the device LCD screen to return to the main interface.

- ①. Audio selection: Press MENU Button enter into setting, and press the INPUT Buttons 1-8("X" represents input sources 1-8), then press UP/DOWN Button to choose HDMI or Analog(HDMI represents HDMI audio signal, Analog represents 3.5MM audio signal), last press ENTER Button to finish.

RX Audio Select	IN PUT PORT: X	IN PUT PORT: X
Select Iu port	Audio SEL: HDMI	SEL: Aanlog

OUT PUT PORT: X
DONE

②. Selective resolution: Press the MENU key twice times to display the following operation interface. select output keys 1~8 ("x" means optional 1~8), Press the UP/DOWN key to select the resolution to be output, and then press the ENTER key to complete the resolution setting.

TX Resolution	TX X Resolution	TX X Resolution	TX X Resolution
Select Outport	4K30	1080P	720P

TX X Resolution
DONE

③. Save scene mode : Press the MENU key 3 times to display the following operation interface. Panel operation can save 16 modes (1~16) . Press UP/DOWN up and down to select the scene that needs to be saved . After selecting the mode, press ENTER to confirm.

STORE SCENE : STORE SCENE:
16 16 DONE

④. Call scene: Press the MENU key 4 times to display the following operation interface. Panel operation can call 16 modes (1~16). Press UP/DOWN up and down to select the scene to be called. After selecting the mode, press ENTER to confirm;

RECALL SCENE : RECALL SCENE :
16 16 DONE

⑤. Switch the buzzer sound : Press the MENU key 5 times to display the following operation interface. You can set the buzzer sound on/ off, UP/DOWN up and down selection switch buzzer sound ;

Turn on the beep	Turn off the beep
Beep Enable:	Beep Enable:
Enable	Disable

⑥. Gain/signal amplitude mode: Press the MENU key 6 times, and the following operation interface will appear. Press the output 1~8 number keys to determine the port that needs to be adjusted. The default amplitude of the product is 10 (Default), and there are 0~31 adjustable amplitudes; Use UP/DOWN to select the appropriate amplitude. After selecting the amplitude, press ENTER to confirm.

TX Swing ADJUST	OUT PUT PORT: X	OUT PUT PORT: X
SELECT OUT PUT:	10 Default	TX SW DONE

⑦. One-to-one display mode: Press the MENU key 7 times and the following operation interface will appear. Press ENTER to confirm. All input channels and output channels will be displayed in one-to-one correspondence (for example, the first input channel is displayed on the first screen);



⑧. Restore factory settings: Press the MENU key 8 times, and the following operation interface will appear. Press ENTER to confirm. The default factory settings can be restored, and the device LCD screen can return to the main interface;




⑨. Scene polling mode (at least 2 scenes must be selected for polling): Press the MENU key 9 times, the following operation interface will appear. For the saved scene mode, you only need to press this option and press UP/DOWN to select polling. . .




5. "UP/DOWN" up and down selection keys

①. Query the status corresponding to the current input and output of the matrix

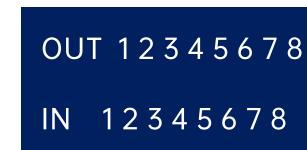

②. Query the version number of the matrix device (subject to the actual factory version)

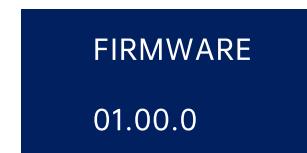

③. Query matrix preferred DNS server



④. Query matrix default gateway



⑤. Query matrix subnet mask



⑥. Query the matrix IP address. The product default IP address is: 192.168.1.200

IP ADDRESS
192.168.1.200

⑦. Query the output online status corresponding to the matrix ("Y" indicates that the output end is connected to a display device, "N" indicates that it is not connected to the screen)

OUT 1 2 3 4 5 6 7 8
CON Y Y Y Y N N N N

⑧. Query the online status of the input corresponding to the matrix ("Y" means there is a signal source input, "N" means there is no signal source input)

IN 1 2 3 4 5 6 7 8
CON Y Y Y Y N N N N

6. Example of switching operation

Example 1: To synchronously switch the first audio and video signal to the third output channel, the steps are as follows:

①. Press the "1" key of the input channel , and the following operation interface will appear on the LCD screen.

SWITCH:
1→

②. Press the "3" key of the output channel , and the following operation interface will appear on the LCD screen.

SWITCH: 1
→3

③. Press the "ENTER" key and the following operation interface will appear on the LCD screen , indicating the execution of the current command.

SWITCH
DONE

Example 2: To synchronously switch the first audio and video signal to all output channels, the steps are as follows:

①. Press the "1" key of the input channel , and the following operation interface will appear on the LCD screen.

SWITCH:
1→

②. Press the "ALL" button to select all , and the following operation interface will appear on the LCD screen.



③. Press the "ENTER" key and the following operation interface will appear on the LCD screen , indicating the execution of the current command.



6.2 Serial port, network port, WEB control operation

6.2.1 Software settings

1. Double-click "MatrixController" to open the application, connection settings: the control type is divided into "serial port, network", the network default IP: 192.168.1.200,
2. Click "Serial Port" to enter and establish a connection between the matrix and the software. Take the computer connected to the serial port "COM4" as an example. The baud rate is 115200. After the operation is completed, click "Connect" to confirm. The matrix will issue a "beep" after the connection is successful. The sound indicates that the connection is successful. If there is no sound, the connection fails, as shown in the figure below:

Figure 1: Serial port login interface



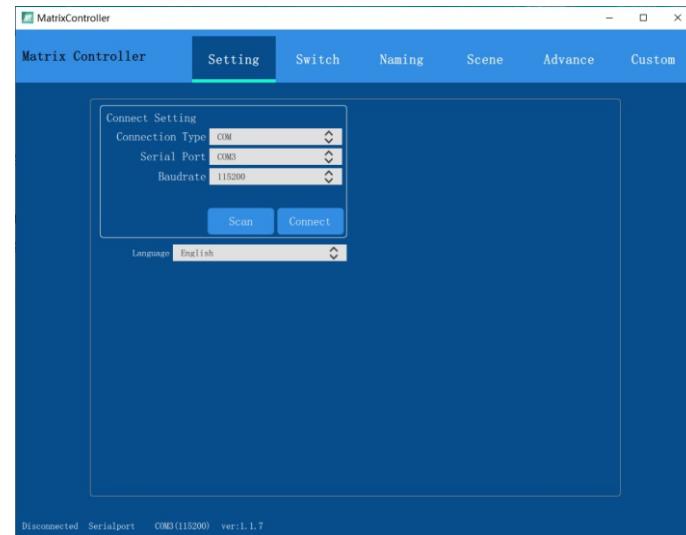


Figure 2: Network login interface

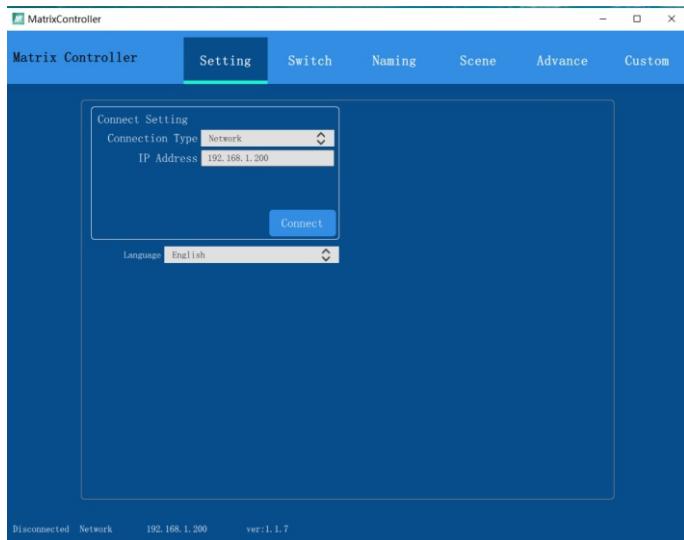

3. After the software is successfully connected, you can modify the IP of the matrix, turn on and off the beep, restore factory settings, and select language, as shown in the figure below:

Figure 3: Setting interface

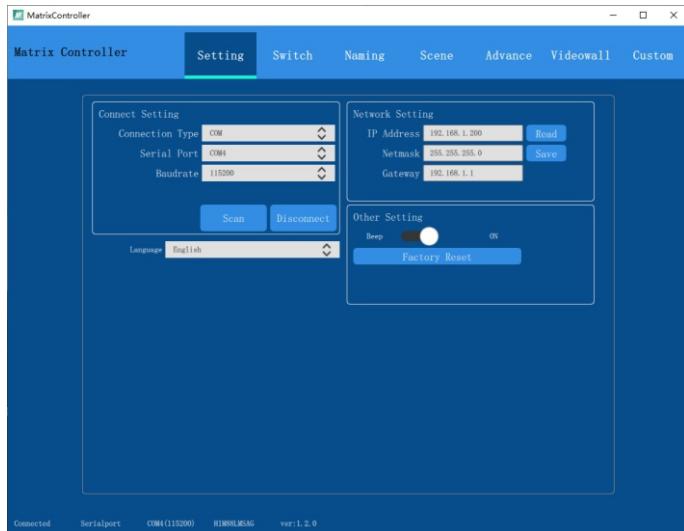

4. Web control: In a local area network, mobile phones, computers, and tablets can open the browser for control. The steps of web control are as follows:

- 4.1. In a local area network, the mobile phone/tablet is connected to WIFI, and the computer and matrix are connected to the same router or switch.
- 4.2. Open the web browser for mobile phones or tablets or computers, and enter the IP address of the matrix at the URL: 192.168.1.200. (The IP address of the matrix is query by DOWN.)
- 4.3. Enter the account: admin, password: admin, log in. If the IP address of the router is not 192.168.1.XX, but 192.168.2.XX, you need to modify the IP address of the matrix or the IP address of the Internet.

① Modify the IP address of the matrix. Use the serial line to connect the matrix in, open the "MatrixController" software, and modify the IP address to 192.168.2. XX. Note: The modified IP address is not occupied in the local area network. After modifying, repeat the previous step 1-3.


② Modify the IP address of the Internet. Take a router or switch to connect a computer, turn on the router settings, modify the IP address of the router to 192.168.1.xx, and then repeat step 1-3.

Note: Don't modify the account password. If you forget it, you need to go back to the factory to set it.

- 4.4. Web login interface. Enter the IP address in the browser, then enter the user name and password, and click to confirm. After the login is successful, enter the video switching interface by default.

Username: admin Password: admin

Figure 4: Network login interface

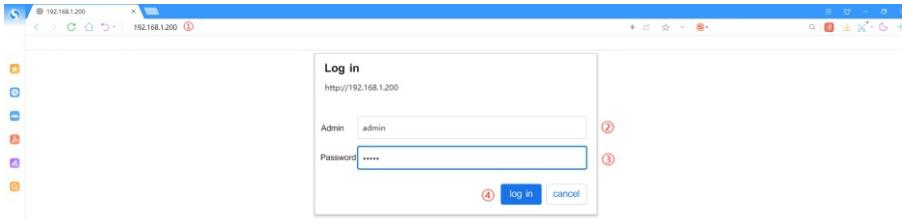


5. Software to control the input and output channel

- ① One to all: a certain input channel is displayed on all the screen;
- ② One to one (equivalent to the OTO button): all input channels and output channels are displayed one by one (such as the 4th input channel displayed in the 4th screen);
- ③ ENTER: Select a certain input channel, then select one or multiple output channels, click Enter, this video signal is displayed on one or more screens;
- ④ Turn off the output: Close the output screen;
- ⑤ Open the output: Open the output screen;
- ⑥ Refresh: View the latest state.

6.2.2 Control display operation


1. Click the "Channel Switch" interface. As shown in the figure below, select the input channel "1" and output channel "1.2.3.4.5.6.7.8", and click "ENTER".
2. Switch a signal to all output channels, select a certain input channel and click "One to All".

Figure 5: One to All interface

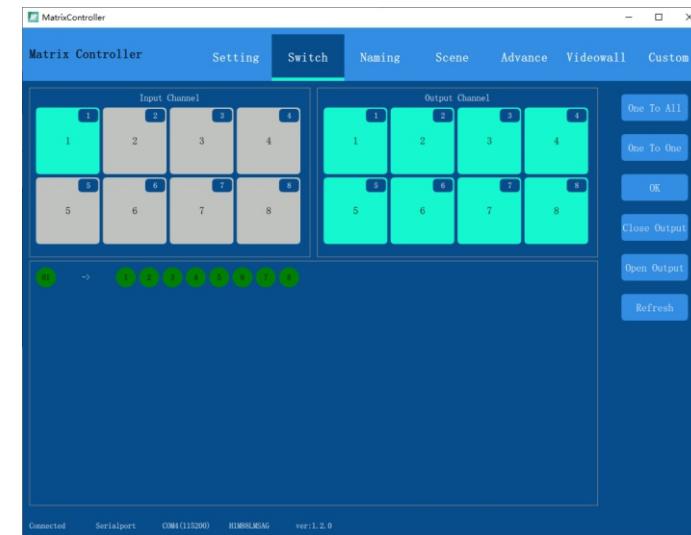


3. One-to-one display (For example, 1-1, 2-2, 3-3, 4-4 ... 8-8, click "One-to-One" directly.)

Figure 6: One to one interface

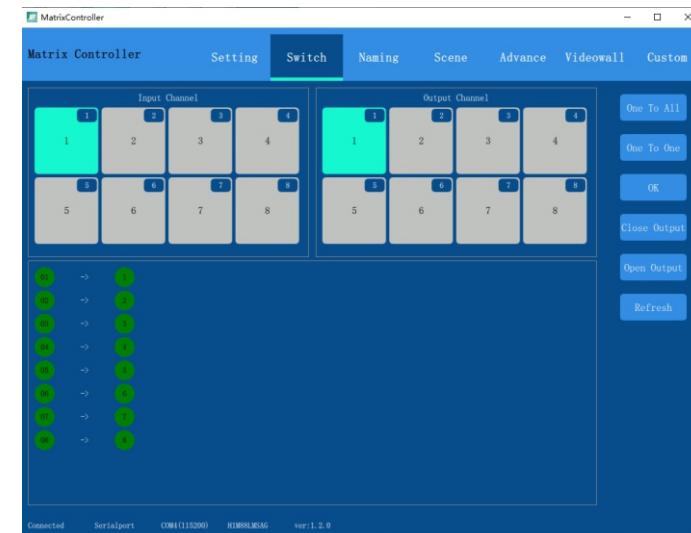


4. Close the displayed screen, click the corresponding output channel (such as output channel 1,2,3,4,5,6,7,8), and then click "Close the output". At this time, the number of the output channel becomes red. As shown below.

Figure 7: Close the output channel interface

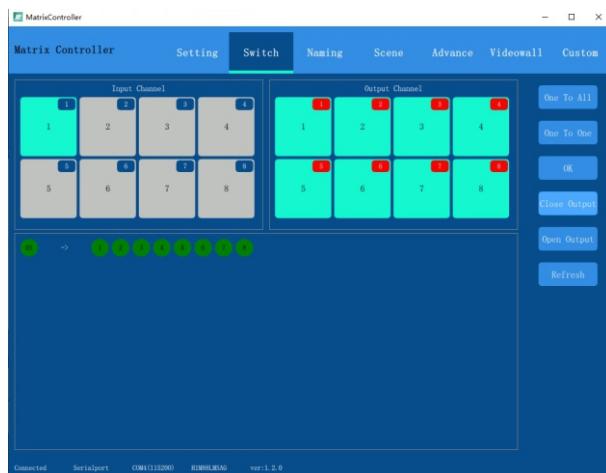

5. Select the output channel "1,2,3,4,5,6,7,8", and then click "Open the output". The number of the output channel will become "blue". As shown below.

Figure 8: Close the output channel interface

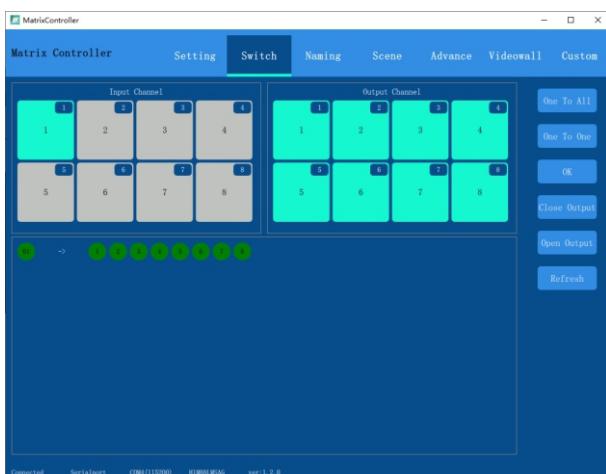

6.2.3 Channel name

1. Click the "Channel Name" interface, enter the name to be changed, and click "Save". If you need to restore the factory default, click "Default", and then click "Save". Support copying and paste function. As shown below.

Figure 9: Channel name interface


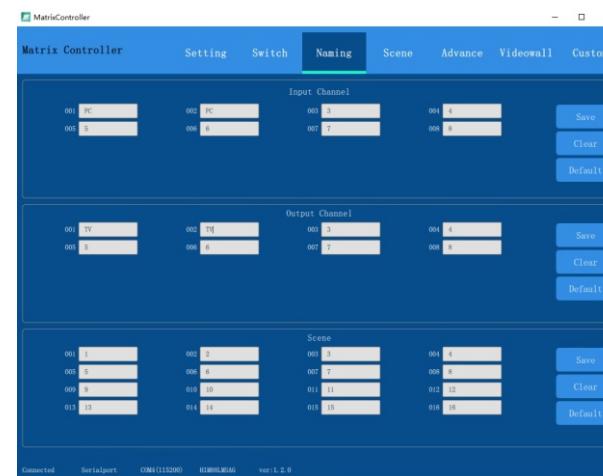



Figure 10: Channel name→Channel switch

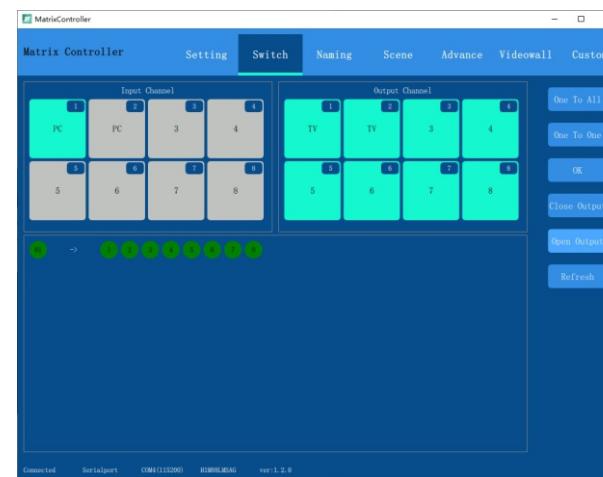

6.2.4 Scene Operations


1. Save scene: Save the current matrix state. For example, switch input 1 to all outputs, select scene mode (scene 1), and click save. As shown bellow.

Figure 11: Save scene

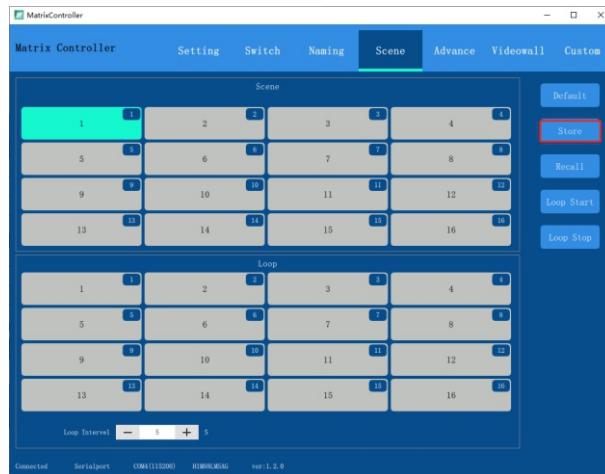


2. Call the scene: call the preserved scene mode. For example, select the scene mode (scene 1), click to call. As shown below.

Figure 12: Call the scene

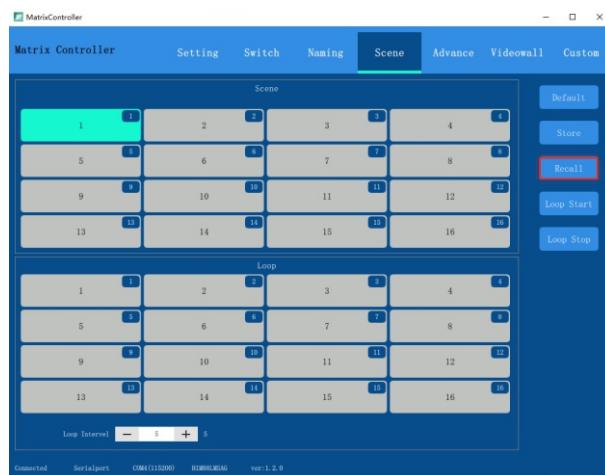


3. Restore the factory scene mode: Click "Default". As shown below.

Figure 13: Restore the factory scene mode

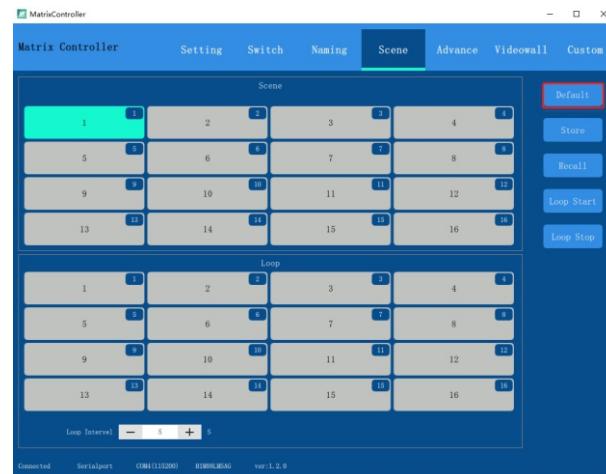

4. Polling settings: The currently saved scene mode is switched in a loop, and the longest settable time between the two modes is "9999" seconds. Take the saved scene mode as an example, select "1.2" for polling switching, and set the time to 5 seconds. As shown below:

Figure 14: Start polling

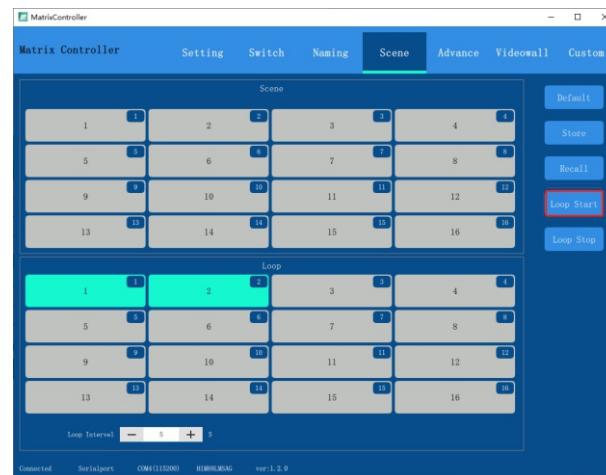

5. Stop polling: Click "Stop polling" to stop polling switching.

Figure 15: Stop polling

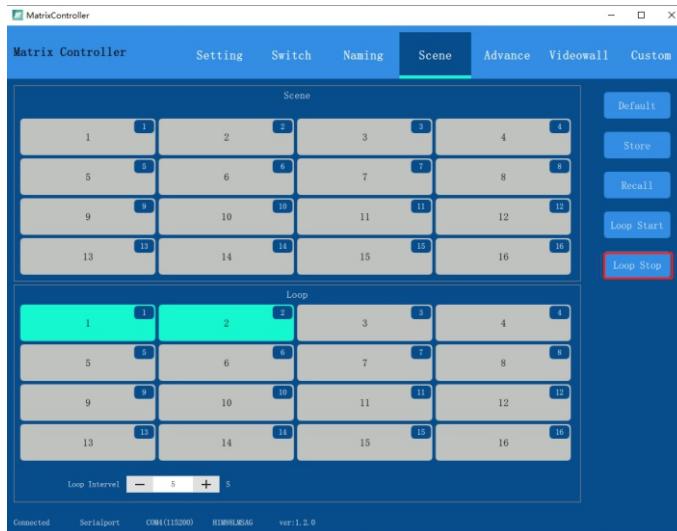


Figure 17: EDID writing


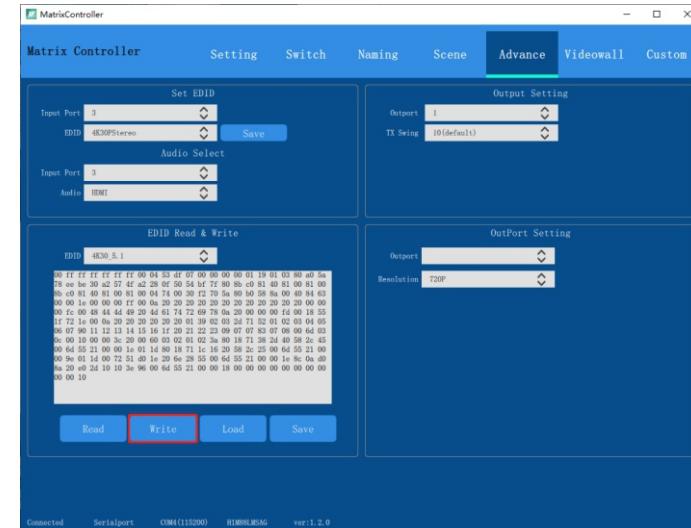


Figure 18: EDID exporting

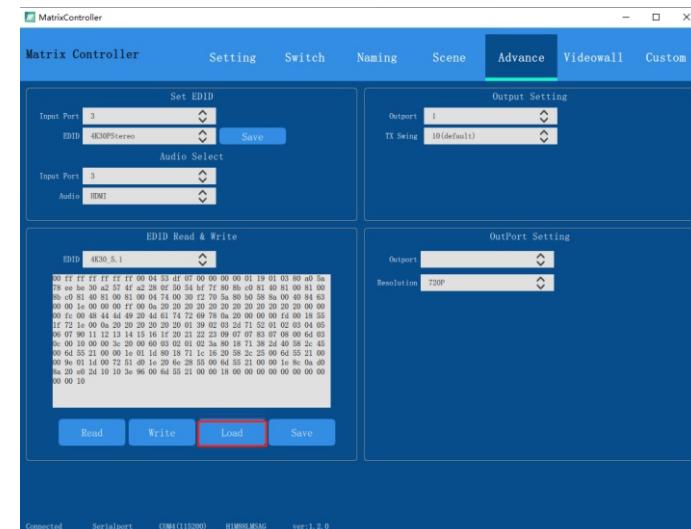

6.2.5 Advanced settings

1. EDID setting (the input source EDID that can be learned), EDID reading and writing (can read and write, export and save), as shown below:

Figure 16: EDID reading



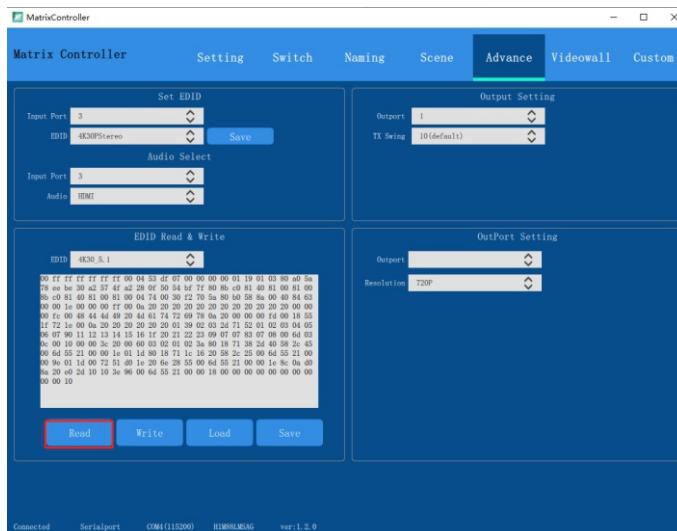


Figure 19: EDID saving

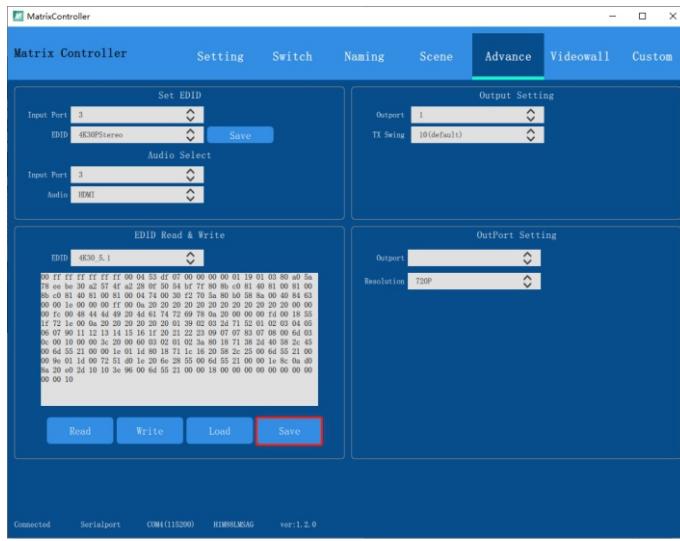


3. The input port can be read for a certain way, as shown in the following figure.

Figure 21: EDID reading and writing

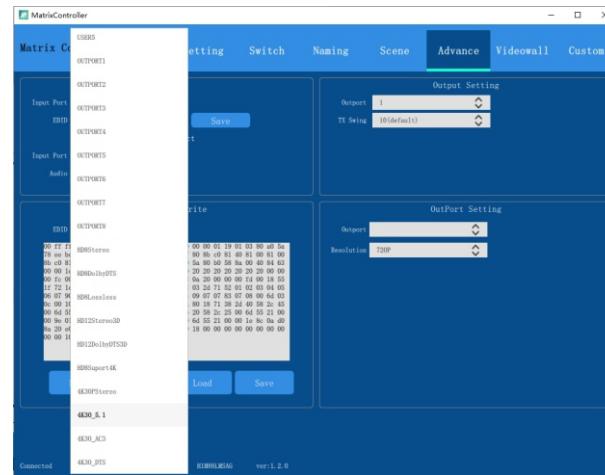

2. EDID setting: select the EDID port that needs to be read, then select the desired EDID, click "save", as shown in the figure below:

Figure 20: EDID Input port

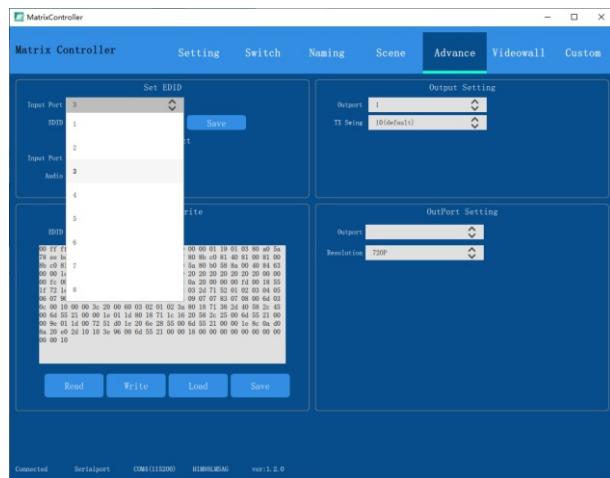


4. EDID reading and writing, select EDID [USER1~5\OUT1~N]\ Built-in EDID], click [Read], it will read the EDID data into the input box, and then select EDID [USER1~5], click [Write], it will execute the EDID to write into the corresponding USER. EDID reading and writing as below:

Note: The EDID reading and writing will change according to the change of product type/number of input channels/ user-defined/number of output channels/built-in EDID, and the following is take matrix 8x8 for reference.

No.	EDID Name	Function
1~8	Input1~8	Input interface EDID
9~13	User1~5	Save user's EDID, user can save EDID here
14~21	Output1~8	Read EDID from the corresponding 1-8 output
22	HD8Stereo	1920x 1080p_ 60HZ_ 8bit_ Stereo
23	HD8DOLBYDST	1920x 1080p_ 60HZ_ 8bit_ DolbyDST
24	HD8LossLess	1920x1080p_ 60HZ_ 8bit_ Lossless
25	HD12Stereo3D	1920x1080p- 60HZ_ 12bit_ .3D_ Stereo
26	HD12DolbyDTS	1920x 1080p_ 60HZ_ 12bit_ Stereo
27	HD8Suport 4k	1920x1080p_ 60HZ_ Suport4k
28	4K30 Pstereo	3840x2160_ 30HZ_ 8bit_ stereo
29	4K30_5.1	3840x2160_ 30HZ_ 8bit_ 5.1
30	4K30_AC3	3840x2160_ 30HZ_ 8bit_ AC3
31	4K30_DTS	3840x2160_ 30HZ_ 8bit_ DTS

5. Equalization settings (Gain mode adjustment) : the product default gain mode is 0 (Default), there are (0~31)to adjust.

Figure 22: Gain mode adjustment Interface

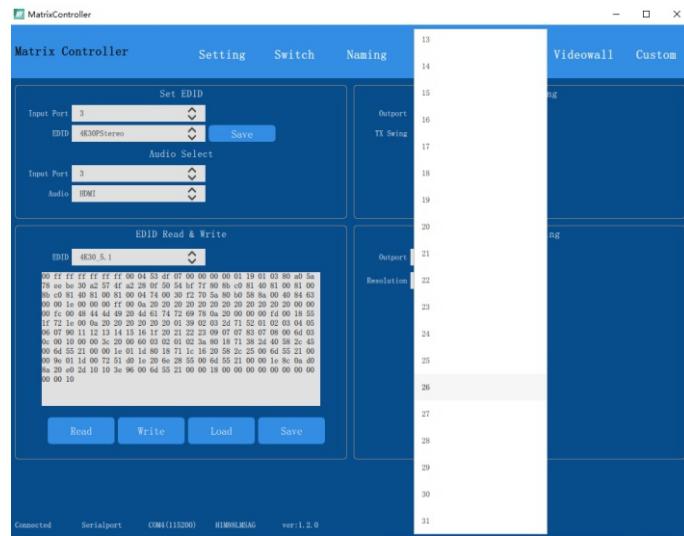

6. The total 8 Output Ports are available to choose 3 kinds of resolution mode(720P, 1080P, 4K@30Hz), the default is 1080P.

Figure 23: The Output Port Interface



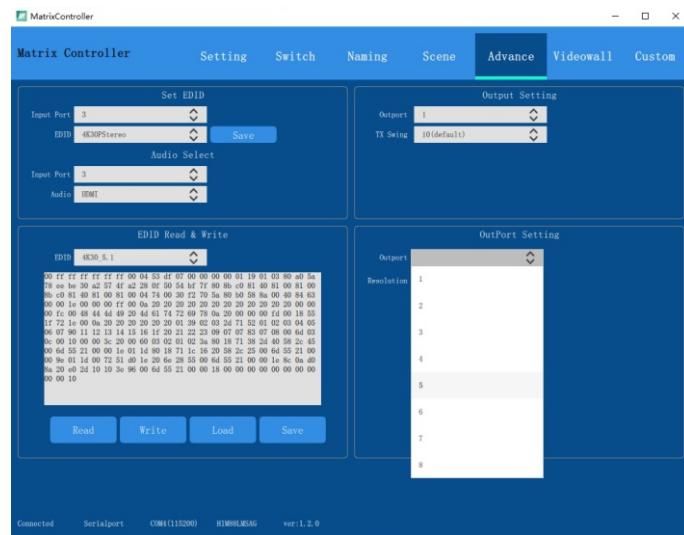


Figure 24: Resolution interface

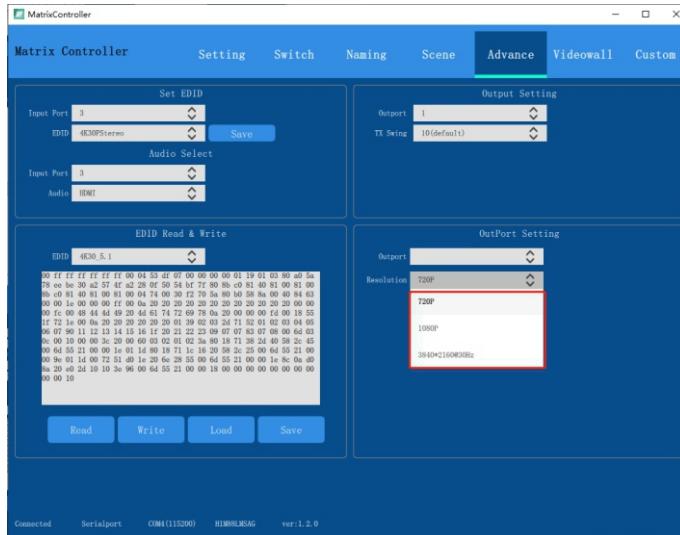

7. The total 8 source input can choose HDMI audio or Extern Audio(HDMI is for source audio, Extern Audio is for 3.5MM audio), the default is HDMI.

Figure 25: Sound interface

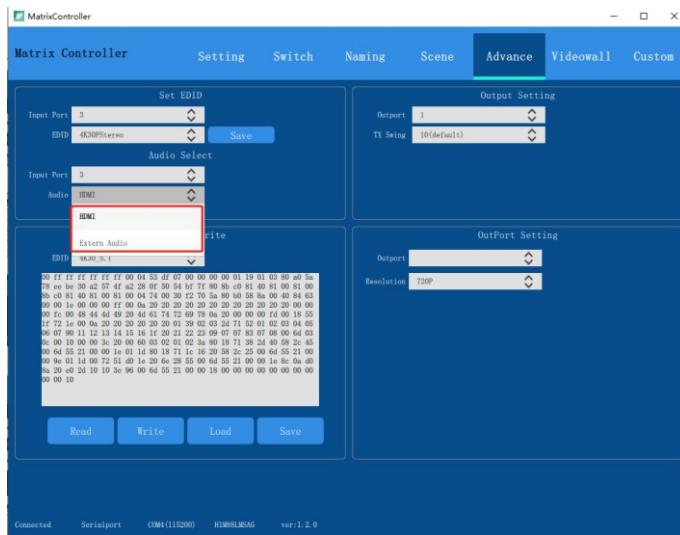

6.2.6 Splicing settings rows and columns

1. The rows and columns is allow to be customerised max to 8. Then the software interface will show the corresponding rows and columns.

Figure 26: The rows setting interface



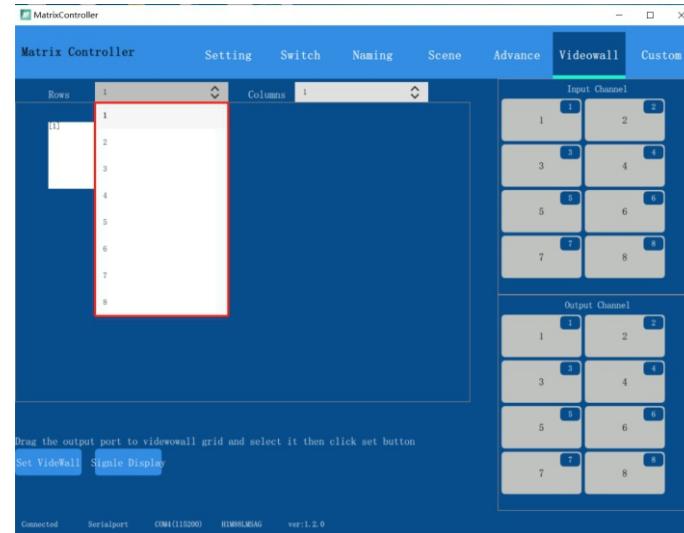


Figure 27: The Columns setting interface

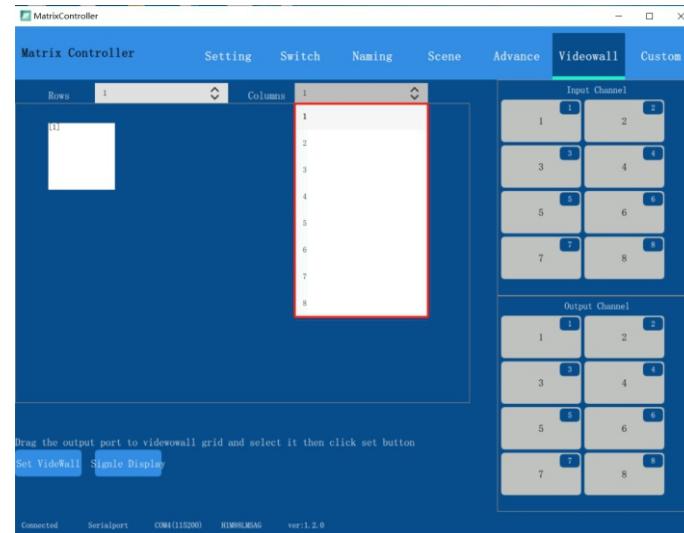


2. After setting up the splicing square, drag the signal channel you want to output to the corresponding square. Finish all the settings, use the mouse to select the square you want to splice (the selected square will turn blue).

Figure 28: Splicing chosen interface

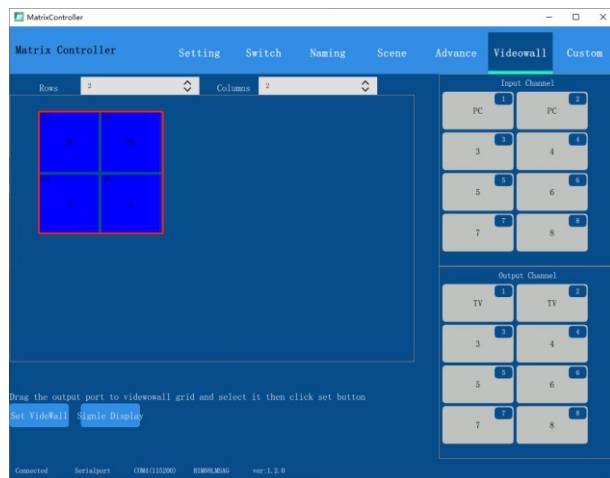

3. Select the stitching square, select the signal source to be set, and set it as Video Wall or Single Display.


Figure 29: Select input interface

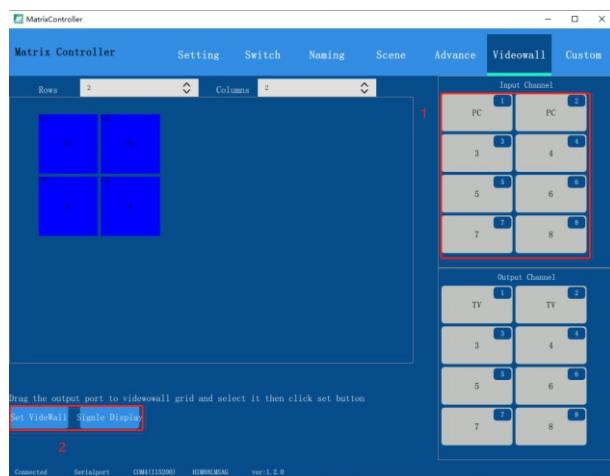

6.2.7 Customer customization

1. According to customer needs, the device LCD screen display information can be modified. After modification, simply click "Save" and the password is "654321" as shown in the following figure.

Figure 30: Customer customization

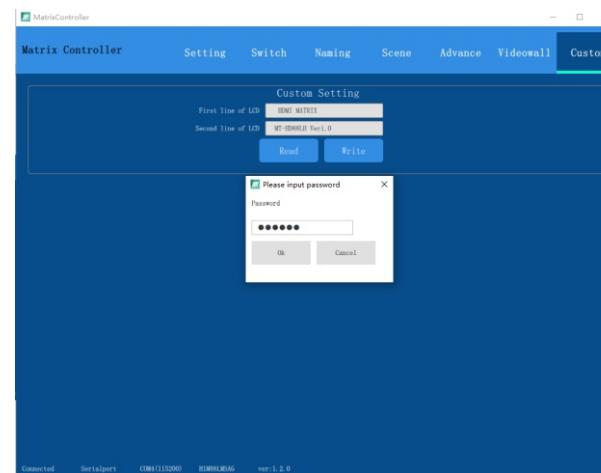


7. APP operation instructions

7.1 Install APP control software

Transfer the app control software "MatrixController2.apk" to the Android tablet through WeChat or QQ or other means, run the app control software, and after installation, the control software icon will appear. Open the software with the default account admin and the default password: admin login, as shown in the following figure:


Figure 31: APP login interface

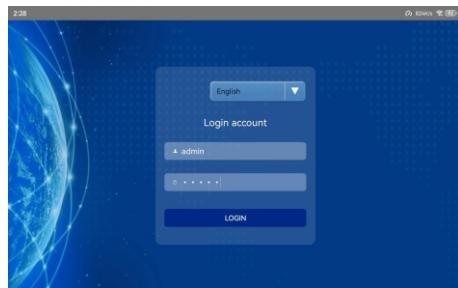

7.2 APP software operation

While entering the main interface, connect to the default IP address of the host; After successful connection, the current number of input and output channels of the device will be displayed based on the information returned by the device. After selecting the input channel, the corresponding input and output will be displayed.

Figure 32: Signal channel interface

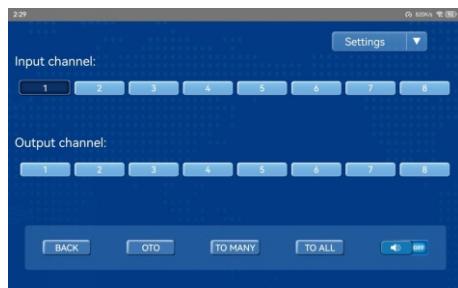

- ①. the one-to-one button, the input channel and the output channel are one-to-one;
- ②. one to many operation instructions:
Select the input and multiple output channels, then click the one-to-many button, you can set one input signal output through multiple output channels;
- ③. one to all operation instructions:
Select the input channel and click one to all buttons to set one input signal output through all output channels;
- ④. clear the channel operation instructions:
Click the BACK button to clear the display of the corresponding relationship between the input and output channel UI interface (without setting the display of the upper computer);
- ⑤. sound switch operation instructions:
Click the sound button to set the buzzer switch of upper computer.

7.3 APP software Settings


- ①. Click the matrix switch button to enter the main screen of matrix setting, as shown below

Figure 33: Matrix setup main




②. Click the communication setting button to set the host ip address and interface number to be connected, as shown below;

Figure 34: Communication setup interface

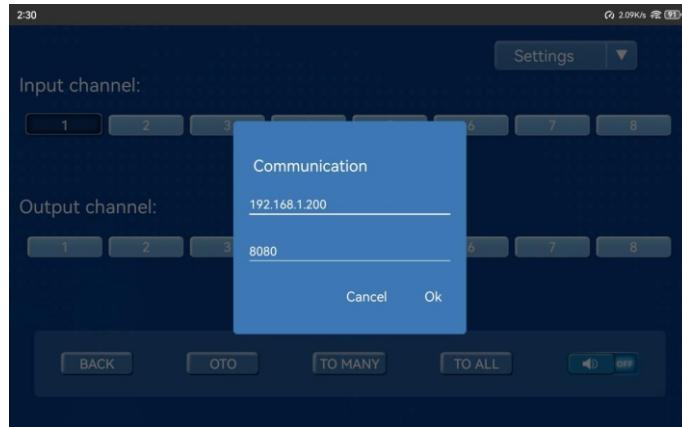

④. Click the scene call list to call the selected scene, as shown below;

Figure 36: Scene call interface

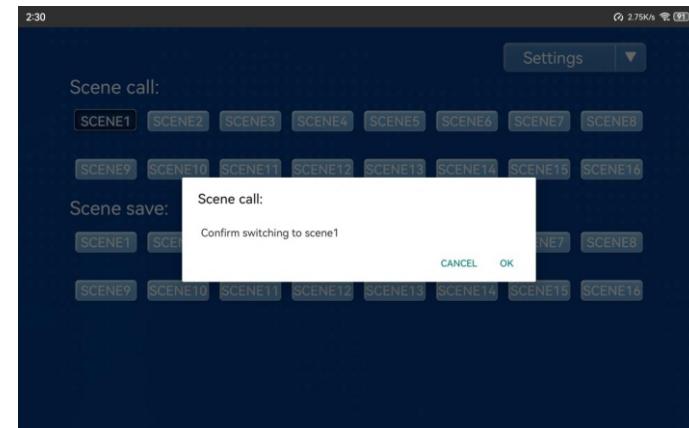


③. Click the scene call button, as shown below;

Figure 35: Scene setup interface



⑤. Click Save scene list to save the current scene to the selected scene, as shown below;

Figure 37: Save scene interface

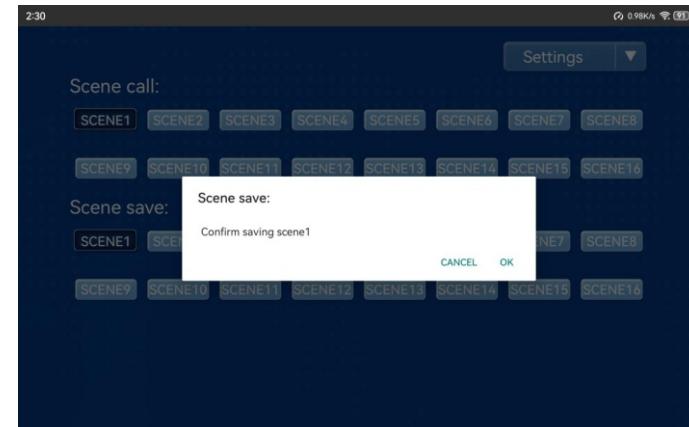

⑥. Click network parameter setting to read and set the network parameters of the upper computer, as shown below;

Figure 38: Network parameter setting interface (read)



⑦. Click the scene polling button to set the scene and interval to be polled, as shown below;

Figure 39: Scene polling Settings



8. Remote control instruction

8.1 Remote control operation instructions



NO.	Name	Introduction
1		Power on/off key
2		Mute button (on/off buzzer sound)
3	F1~F8 key	Reserved function
4	SAVE key	Save scene
5	RECALL key	Call scene
6	Up&down key	Page up or down
7	Left&right key	Reserved function
8	OK key	Confirm operation
9	FUN key	Main menu function
10	CANCEL key	Return
11	0~9 key	Number
12	ALL key	Switch all
13	EDID key	EDID learning key

Remote control operation

- ① One to two: 1→2→OK
- ② One to all: 1→ALL→OK
- ③ One to one: FUN→SWITCH O To O→OK
- ④ Save scene: Save→Up & down key(1-16 mode)→OK
- ⑤ Calling scene: Recall→Up & down key(1-16 mode)→OK
- EDID read:
 - ①. A certain road EDID→Number key(1-4)→Up and down key selection mode→OK
 - ②. All EDID→ALL→Up and down key selection mode→OK

8.2 IR Code of Remote Control

QD21D-1PCB stopwatch 00FF		
45	46	47
44	40	43
07	15	09
16	19	0D
0C	18	5E
08	1C	5A
42	52	4A

User Code table 00FF			
A8			88
90	83	98	82
93	9C	8C	D6
97		95	96
98		9E	99
91		9A	A4
87		86	85
8B		8A	89
8F		8E	8D
84		92	94

9. Matrix control protocol

RS232 communication protocol and central control instruction code description

Using a direct connection (if through the USB-RS232 conversion line can be connected to the matrix serial port for control)
Communication protocol: (Baud rate 115200, stop bit 1, data bit 8, paritybit NONE)

Type	Control commands	Function
Operation commands	[X1]ALL.	Switch the input of [x1] to All output
	[x0]ALL.	Close all output
	[x0]X[x1].	Close the output of [x1]
	ALL[1].	Set all channels one to one,e.g:1->1,2->2,3->3...
	[x1]X[x2].	Switch the input of [x1] to [x2] output
	[x1]X[x2]&[x3]&[x4].	Switch the input of [x1] to [x2],[x3],[x4] output
	Save[Y].	Save current status to [Y] storage unit,[Y] can be number key from 1-16
	Recall[Y].	Recall the status saved in [Y],[Y] can be number key from 1-16.
	Beep ON.	Turn off buzzer
	Beep OFF.	Turn off buzzer

Remarks:

1. [x1], [x2], [x3], [x4] are the number of input and output channels, which are according to the controlled matrix. If the controlled matrix is a 8*8 matrix, and it is out of range, it is treated as a command input error. And "[]" in the instruction is not a send character;
2. The ending character of each instruction cannot be missed, and there is a ". " at the end of each instruction. Punctuation marks are punctuation marks in the English input.

3. The letters are not case sensitive and some instruction codes as examples:

①.Switch the [x1] input to all the output

Example: To switch the 3rd input to all output, type '3All.'

②.Close all output: [x0]All.

Example: Type 0All'0All.'

③.Close [x1] output: [x0]X[x1].

Example: To turn off output one, enter '0x1.'. If you need to turn off output one and two at the same time, enter '0x1.0x2.'

④.Set all channels correspond one to one: All[1].

For example, after running the 8*8 HDMI matrix, the state is 3->3,8->8, enter"ALL1."

⑤.Video switch instruction: [x1]X[x2].

Example: To switch the 2nd input to the 4th output, enter "2X4.", and to switch the 3rd input to the 3 and 4 output, enter " 2X3&4."

⑥.Save the current status : Save[Y].

Example: To save the current state to storage unit 5, enter Save5.

⑦.Call the stored unit instruction: Recall[Y].

Example:To call the state of storage unit 6 and configure it to the input or output state of the matrix, enter Recall6.

⑧.Turn on and turn off buzzer

Example: BeepON. , Turn on buzzer

BeepOFF., Turn off buzzer

10. Product common faults and precautions

1.Large signal interference: check whether the signal connection cable and plug are good, whether the cable meets the requirements of the specification, whether the system grounding is good, and whether the AC power grounding system between the devices is consistent.

2.When there is color loss or no video signal output, it may be that the connectors at the two ends of the signal line are not connected properly, pls check the cable.

3.When the serial port (refer to: computer or central control serial port) cannot control the matrix switch, please check whether the port number of the software serial port is correct

4.When the matrix switch is switched, the buzzer sounds, but there is no corresponding image transmission:

1) See if there is a signal at the corresponding input. (Can be detected by oscilloscope or multimeter) If there is no signal input, it may be that the input cable is broken, or the connector is loose, replace the connected cable can be OK;

2) See if there is a signal at the corresponding output. (Can be detected by oscilloscope or multimeter) If there is no signal output, it may be that the output is broken, or the connector is loose, ,replace the connected cable can be OK.

5.If the matrix switch input and output signals can be switched but there is no Beep sound, it may be that you turn off the buzzer sound

6. If the LCD screen has no display, the operation does not respond, may be power supply' abnormal.

7. When connecting the connector, if the static electricity come to be strong, the power ground cable may not be connected to the ground. Please connect it properly, otherwise it will easily damage the host and shorten the life of the host.

8. When the matrix switch panel buttons, serial port and remote control cannot be controlled, the internal host may be damaged. Please send it to a professional for repair.

9.Do not put items on the power line, signal line, communication line and other cables, do not step on the cable, soak, wear, to prevent leakage,short circuit phenomenon.

10.The working environment of the device must be dustproof, moisture-proof, and the temperature must meet the working requirements of the product. Do not pour liquid or conductive solid into the product to prevent product damage.